

Operation and Maintenance Guide

MANUEL AND AUTOMATIC PVC-SWINGDOORS

MP0071- MP0072

AP0071 - AP0072

Maintenance:

By choice of materials these doors have been designed so as to require a minimum of maintenance. Your attention is, however, drawn to the fact that certain fittings may require maintenance. Such as:

1. The PVC will stretch after some time and should then be cut to fit with a sharp knife.
2. The driving wheel bolts and nuts to be checked at regular intervals, and tightened if necessary.
3. Torsion springs dismantled and lubricated at regular intervals.

Automatic:

4. Motor bracket with motor, gear wheel, and fitting parts to be checked at regular intervals, and tightened if necessary.
5. Limit stop to be checked at regular intervals for wear and tear, and replaced if necessary.

Adjustment:

1. Adjustment may be performed according to drawings for the particular door type.
2. DAN-doors Installation/Service Department may be requisitioned. Phone: +4540909967
3. A service and maintenance agreement may be signed with DAN-doors.

Operation and Maintenance Guide

MANUEL AND AUTOMATIC PVC-SWINGDOORS

MP0071- MP0072

AP0071 - AP0072

CLEANING:

Detergent types referred to below shall meet the requirements prepared by the Danish Technological Institute (Teknologisk Institut).

In the food industry, there may be a requirement to the effect that the detergents used shall have been approved by the Danish Veterinary and Food Administration.

Such approval shall appear from the label, with reference to a journal number.

Data sheet/supplier directions for use should always be read prior to commencing work.

Cleaning Methods: Cleaning with universal or basic detergents. Wash thoroughly with water.

Not resistant to: Strong acids and solvents.